

ASSEMBLY INSTRUCTIONS

Oxford 24" Bath Sconce


Item # CHD1553

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

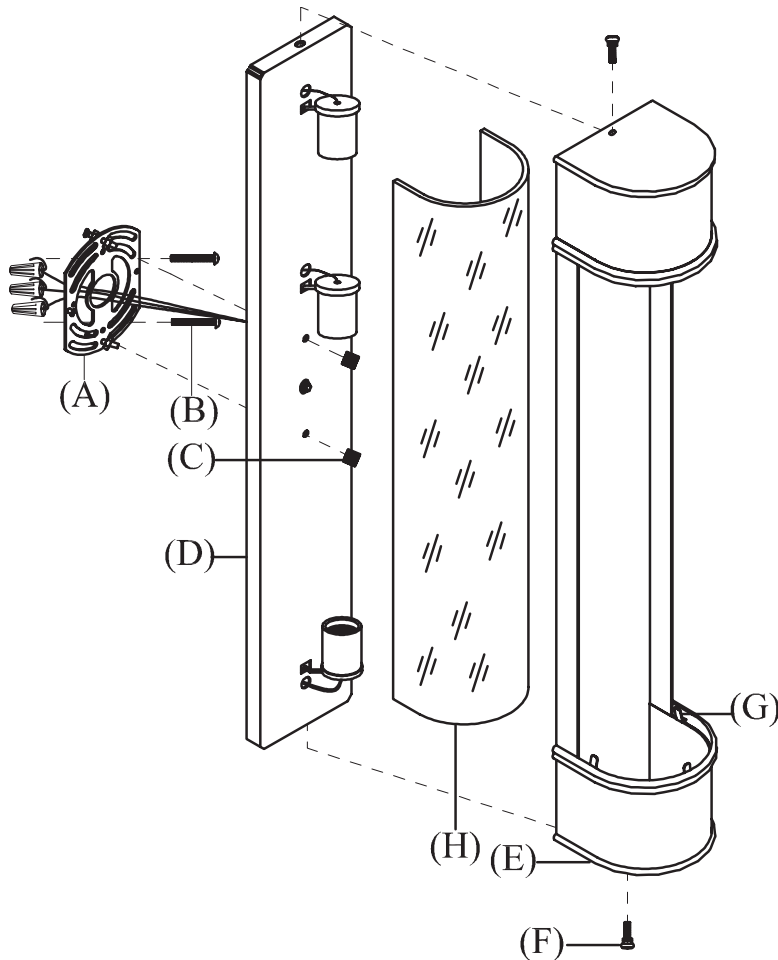

1. Remove glass holder (E) from fixture base (D) by unscrewing base screws (F).
2. Remove mounting plate (A) from fixture base (D) by removing cap nuts (C).
3. Affix mounting plate (A) to wall outlet box, and secure with mounting screws (B) provided.
4. Attach ground (green) wire to ground wire from wall outlet box (usually green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
5. Connect both neutral (white) fixture wires coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
6. Repeat the procedure with the hot (black) wires. Always make sure that no wire strands are left outside the connectors.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
7. Attach fixture base (D) to affixed mounting plate (A), letting rods on mounting plate (A) pass through the holes on fixture base (D) and secure with cap nuts (C).
8. Insert light bulbs (not included) the sockets.
9. To install the glass shade (H), make sure the metal tabs (G) flipped against the openings of the glass holder (E).
10. Place glass shade (H) to the glass holder (E) and secure by bending back the metal tabs (G) towards the openings of the glass holder (E).
11. Attach glass holder (E) to fixture base (D) and secure with base screws (F).